

Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12104=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12105
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12105=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12104
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12104=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12105
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12105=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12103XI
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12103XI=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12104
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12104=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12105
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12105=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12103XI
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12104
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12104=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12105
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12105=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12103XI
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12103XI=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12104
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12104=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12105
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12105=
Cisco 3640 Series IOS ENTERPRISE PLUS/H323 MCM	S364APU-12103XI
Cisco 3640 Series IOS ENTERPRISE PLUS/H323 MCM	S364APU-12103XI=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12104
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12104=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12105
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12105=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12104
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12104=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12105
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12105=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12104
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12104=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12105

Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12105=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12104
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12104=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12105
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12105=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12104
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12104=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12105
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12105=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12104
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12104=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12105
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12105=
Cisco 3640 Series IOS IP	S364C-12104
Cisco 3640 Series IOS IP	S364C-12104=
Cisco 3640 Series IOS IP	S364C-12105
Cisco 3640 Series IOS IP	S364C-12105=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12104
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12104=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12105
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12105=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12103XI
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12104
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12104=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12105
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12105=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12103XI
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12104
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12104=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12105
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12105=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12104
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12104=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12105
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12105=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12103XI
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12103XI=

Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12104
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12104=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12105
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12105=
Cisco 3640 Series IOS IP PLUS	S364CP-12103XI
Cisco 3640 Series IOS IP PLUS	S364CP-12103XI=
Cisco 3640 Series IOS IP PLUS	S364CP-12104
Cisco 3640 Series IOS IP PLUS	S364CP-12104=
Cisco 3640 Series IOS IP PLUS	S364CP-12105
Cisco 3640 Series IOS IP PLUS	S364CP-12105=
Cisco 3640 Series IOS IP/H323 MCM	S364CU-12103XI
Cisco 3640 Series IOS IP/H323 MCM	S364CU-12103XI=
Cisco 3640 Series IOS IP/H323	S364CU-12104
Cisco 3640 Series IOS IP/H323	S364CU-12104=
Cisco 3640 Series IOS IP/H323	S364CU-12105
Cisco 3640 Series IOS IP/H323	S364CU-12105=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12103T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12103T=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12103T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12103T=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12103T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12103T=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12103T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12103T=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12103T
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12103T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12103T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12103T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12103T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12103T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12103T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12103T=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12103T
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12103T=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12103T
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12103T=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12103T

Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12103T=
Cisco 3640 Series IOS IP	S364C-12103T
Cisco 3640 Series IOS IP	S364C-12103T=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12103T
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12103T=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12103T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12103T=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12103T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12103T=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12103T
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12103T=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12103T
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12103T=
Cisco 3640 Series IOS IP PLUS	S364CP-12103T
Cisco 3640 Series IOS IP PLUS	S364CP-12103T=
Cisco 3640 Series IOS IP/H323	S364CU-12103T
Cisco 3640 Series IOS IP/H323	S364CU-12103T=
Cisco 3640 Series IOS SERVICE PROVIDER WITH PT/TARP	S364Z7-12103T=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12103
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12103=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12103
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12103=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12103
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12103=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12103
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12103=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12103
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12103=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12103
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12103=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12103
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12103=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12103
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12103=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12103
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12103=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12103

Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12103=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12103
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12103=
Cisco 3640 Series IOS IP	S364C-12103
Cisco 3640 Series IOS IP	S364C-12103=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12103
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12103=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12103
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12103=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12103
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12103=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12103
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12103=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12103
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12103=
Cisco 3640 Series IOS IP PLUS	S364CP-12103
Cisco 3640 Series IOS IP PLUS	S364CP-12103=
Cisco 3640 Series IOS IP/H323	S364CU-12103
Cisco 3640 Series IOS IP/H323	S364CU-12103=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12102XH
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12102XH
Cisco 3640 Series IOS IP PLUS	S364CP-12102XH
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12102T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12102T=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12102T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12102T=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12102T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12102T=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12102T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12102T=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12102T
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12102T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12102T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12102T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12102T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12102T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12102T

Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12102T=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12102T
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12102T=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12102T
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12102T=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12102T
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12102T=
Cisco 3640 Series IOS IP	S364C-12102T
Cisco 3640 Series IOS IP	S364C-12102T=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12102T
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12102T=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12102T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12102T=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12102T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12102T=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12102T
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12102T=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12102T
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12102T=
Cisco 3640 Series IOS IP PLUS	S364CP-12102T
Cisco 3640 Series IOS IP PLUS	S364CP-12102T=
Cisco 3640 Series IOS IP/H323	S364CU-12102T
Cisco 3640 Series IOS IP/H323	S364CU-12102T=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12102
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12102=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12102
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12102=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12102
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12102=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12102
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12102=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12102
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12102=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12102
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12102=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12102
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12102=

Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12102
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12102=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12102
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12102=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12102
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12102=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12102
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12102=
Cisco 3640 Series IOS IP	S364C-12102
Cisco 3640 Series IOS IP	S364C-12102=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12102
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12102=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12102
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12102=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12102
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12102=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12102
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12102=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12102
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12102=
Cisco 3640 Series IOS IP PLUS	S364CP-12102
Cisco 3640 Series IOS IP PLUS	S364CP-12102=
Cisco 3640 Series IOS IP/H323	S364CU-12102
Cisco 3640 Series IOS IP/H323	S364CU-12102=
Cisco 3640 Series IOS Enterprise/APPN Plus	S364ANP-12.0.10W
Cisco 3640 Series IOS Enterprise/APPN Plus	S364ANP-12.0.10W=
Cisco 3640 Series IOS Enterprise Plus	S364AP-12.0.10W
Cisco 3640 Series IOS Enterprise Plus	S364AP-12.0.10W=
Cisco 3640 Series IOS IP/IPX/AT/DEC Plus	S364BP-12.0.10W
Cisco 3640 Series IOS IP/IPX/AT/DEC Plus	S364BP-12.0.10W=
Cisco 3640 Series IOS IP Plus	S364CP-12.0.10W
Cisco 3640 Series IOS IP Plus	S364CP-12.0.10W=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12007XK
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S364AHK2-12007XK=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12007XK
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12007XK=

Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12007XK
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12007XK=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12007XK
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12007XK=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12007XK
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12007XK=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12007XK
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12007XK=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12007XK
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12007XK=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12007XK
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12007XK=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12007XK
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12007XK=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12007XK
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12007XK=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12007XK
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12007XK=
Cisco 3640 Series IOS IP	S364C-12007XK
Cisco 3640 Series IOS IP	S364C-12007XK=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12007XK
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12007XK=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12007XK
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12007XK=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12007XK
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12007XK=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12007XK
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12007XK=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12007XK
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12007XK=
Cisco 3640 Series IOS IP PLUS	S364CP-12007XK
Cisco 3640 Series IOS IP PLUS	S364CP-12007XK=
Cisco 3640 Series IOS IP/H323	S364CU-12007XK
Cisco 3640 Series IOS IP/H323	S364CU-12007XK=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S364AHL-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12.0.7T



Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	S364AK2-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12.0.7T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	S364AL-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12.0.7T
Cisco 3640 Series IOS ENTERPRISE PLUS	S364AP-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S364AR1K2-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S364AR1L-12.0.7T=
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS	S364AR1P-12.0.7T=
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12.0.7T
Cisco 3640 Series IOS IP/IPX/AT/DEC	S364B-12.0.7T=
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12.0.7T
Cisco 3640 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S364BHP-12.0.7T=
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12.0.7T
Cisco 3640 Series IOS IP/IPX/AT/DEC PLUS	S364BP-12.0.7T=
Cisco 3640 Series IOS IP	S364C-12.0.7T=
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12.0.7T
Cisco 3640 Series IOS IP/FW/IDS	S364CH-12.0.7T=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12.0.7T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S364CHK2-12.0.7T=
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12.0.7T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	S364CHL-12.0.7T=
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12.0.7T
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	S364CK2-12.0.7T=
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12.0.7T
Cisco 3640 Series IOS IP PLUS IPSEC 56	S364CL-12.0.7T=
Cisco 3640 Series IOS IP PLUS	S364CP-12.0.7T
Cisco 3640 Series IOS IP PLUS	S364CP-12.0.7T=
Cisco 3640 Series IOS IP/H323	S364CU-12.0.7T
Cisco 3640 Series IOS IP/H323	S364CU-12.0.7T=
Cisco IOS 3640 Series ENTERPRISE	SF364A-11.2.22P
Cisco IOS 3640 Series ENTERPRISE	SW364A-11.2.22P=
Cisco IOS 3640 Series Enterprise/APPN Plus	SF364ANP-11.2.22P
Cisco IOS 3640 Series Enterprise/APPN Plus	SW364ANP-11.2.22P=
Cisco IOS 3640 Series Enterprise/APPN Plus 40	SF364ANW-11.2.22P

Cisco IOS 3640 Series Enterprise/APPN Plus 40	SW364ANW-11.2.22P=
Cisco IOS 3640 Series Enterprise/APPN Plus 56	SF364ANY-11.2.22P
Cisco IOS 3640 Series Enterprise/APPN Plus 56	SW364ANY-11.2.22P=
Cisco IOS 3640 Series Enterprise Plus	SF364AP-11.2.22P
Cisco IOS 3640 Series Enterprise Plus	SW364AP-11.2.22P=
Cisco IOS 3640 Series Enterprise Plus 40	SF364AW-11.2.22P
Cisco IOS 3640 Series Enterprise Plus 40	SW364AW-11.2.22P=
Cisco IOS 3640 Series Enterprise Plus 56	SF364AY-11.2.22P
Cisco IOS 3640 Series Enterprise Plus 56	SW364AY-11.2.22P=
Cisco IOS 3640 Series IP/IPX/AT/DEC	SF364B-11.2.22P
Cisco IOS 3640 Series IP/IPX/AT/DEC	SW364B-11.2.22P=
Cisco IOS 3640 Series IP/IPX/AT/DEC Plus	SF364BP-11.2.22P
Cisco IOS 3640 Series IP/IPX/AT/DEC Plus	SW364BP-11.2.22P=
Cisco IOS 3640 Series IP/IPX/AT/DEC PLUS 40	SF364BW-11.2.22P
Cisco IOS 3640 Series IP/IPX/AT/DEC PLUS 40	SW364BW-11.2.22P=
Cisco IOS 3640 Series IP	SF364C-11.2.22P
Cisco IOS 3640 Series IP	SW364C-11.2.22P=
Cisco IOS 3640 Series IP Plus	SF364CP-11.2.22P
Cisco IOS 3640 Series IP Plus	SW364CP-11.2.22P=
Cisco IOS 3640 Series IP Plus 40	SF364CW-11.2.22P
Cisco IOS 3640 Series IP Plus 40	SW364CW-11.2.22P=
Cisco IOS 3640 Series IP Plus 56	SF364CY-11.2.22P
Cisco IOS 3640 Series IP Plus 56	SW364CY-11.2.22P=
Cisco IOS 3640 Series IP/IPX/IBM/APPN	SF364DSN-11.2.22P
Cisco IOS 3640 Series IP/IPX/IBM/APPN	SW364DSN-11.2.22P=
Cisco IOS 3640 Series ENTERPRISE	SF364A-11.2.23P
Cisco IOS 3640 Series ENTERPRISE	SW364A-11.2.23P=
Cisco IOS 3640 Series Enterprise/APPN Plus	SF364ANP-11.2.23P
Cisco IOS 3640 Series Enterprise/APPN Plus	SW364ANP-11.2.23P=
Cisco IOS 3640 Series Enterprise/APPN Plus 40	SF364ANW-11.2.23P
Cisco IOS 3640 Series Enterprise/APPN Plus 40	SW364ANW-11.2.23P=
Cisco IOS 3640 Series Enterprise/APPN Plus 56	SF364ANY-11.2.23P
Cisco IOS 3640 Series Enterprise/APPN Plus 56	SW364ANY-11.2.23P=
Cisco IOS 3640 Series Enterprise Plus	SF364AP-11.2.23P
Cisco IOS 3640 Series Enterprise Plus	SW364AP-11.2.23P=
Cisco IOS 3640 Series Enterprise Plus 40	SF364AW-11.2.23P
Cisco IOS 3640 Series Enterprise Plus 40	SW364AW-11.2.23P=

Cisco IOS 3640 Series Enterprise Plus 56	SF364AY-11.2.23P
Cisco IOS 3640 Series Enterprise Plus 56	SW364AY-11.2.23P=
Cisco IOS 3640 Series IP/IPX/AT/DEC	SF364B-11.2.23P
Cisco IOS 3640 Series IP/IPX/AT/DEC	SW364B-11.2.23P=
Cisco IOS 3640 Series IP/IPX/AT/DEC Plus	SF364BP-11.2.23P
Cisco IOS 3640 Series IP/IPX/AT/DEC Plus	SW364BP-11.2.23P=
Cisco IOS 3640 Series IP/IPX/AT/DEC PLUS 40	SF364BW-11.2.23P
Cisco IOS 3640 Series IP/IPX/AT/DEC PLUS 40	SW364BW-11.2.23P=
Cisco IOS 3640 Series IP	SF364C-11.2.23P
Cisco IOS 3640 Series IP	SW364C-11.2.23P=
Cisco IOS 3640 Series IP Plus	SF364CP-11.2.23P
Cisco IOS 3640 Series IP Plus	SW364CP-11.2.23P=
Cisco IOS 3640 Series IP Plus 40	SF364CW-11.2.23P
Cisco IOS 3640 Series IP Plus 40	SW364CW-11.2.23P=
Cisco IOS 3640 Series IP Plus 56	SF364CY-11.2.23P
Cisco IOS 3640 Series IP Plus 56	SW364CY-11.2.23P=
Cisco IOS 3640 Series IP/IPX/IBM/APPN	SW364DSN-11.2.23P=
Encryption Export Licenses for the Cisco 3640	
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12105
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12105
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12105
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12105
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12105
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12007XK
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	I364AR1L-12007XK
Cisco 3640 Series IOS IP	I364C-12007XK
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12007XK
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12007XK
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	I364CHL-12007XK
Cisco 3640 Series IOS IP PLUS IPSEC 56	I364CL-12007XK
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12007XK
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12007XK
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	I364AHL-12007XK
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	I364AL-12007XK
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	I364AHL-12.0.7T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12.0.7T

Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 56	I364AL-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12.0.7T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	I364AR1L-12.0.7T
Cisco 3640 Series IOS IP	I364C-12.0.7T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12.0.7T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 56	I364CHL-12.0.7T
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12.0.7T
Cisco 3640 Series IOS IP PLUS IPSEC 56	I364CL-12.0.7T
Cisco IOS 3640 Series Enterprise/APPN Plus 56	I364ANY-11.2.22P=
Cisco IOS 3640 Series Enterprise/APPN Plus 56	I364ANY-11.2.23P=
Cisco IOS 3640 Series Enterprise Plus 56	INT364AY-11.2.22P=
Cisco IOS 3640 Series IP Plus 56	INT364CY-11.2.22P=
Cisco IOS 3640 Series Enterprise Plus 56	INT364AY-11.2.23P=
Cisco IOS 3640 Series IP Plus 56	INT364CY-11.2.23P=
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12102
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12102
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12102
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12102
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12102
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12102T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12102T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12102T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12102T
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12102T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12103T
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12103T
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12103T
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12103T
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12103T
Cisco 3640 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I364AHK2-12103
Cisco 3640 Series IOS ENTERPRISE PLUS IPSEC 3DES	I364AK2-12103
Cisco 3640 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I364AR1K2-12103
Cisco 3640 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I364CHK2-12103
Cisco 3640 Series IOS IP PLUS IPSEC 3DES	I364CK2-12103
<b>Cisco 3600 Series Software Options - Model 3620</b>	
4 User LAT Terminal License	FL-LAT4=
8 User LAT Terminal License	FL-LAT8=

16 User LAT Terminal License	FL-LAT16=
32 User LAT Terminal License	FL-LAT32=
64 User LAT Terminal License	FL-LAT64=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12105
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12105=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12105
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12105=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12105
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12105=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12105
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12105=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12105
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12105=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12105
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12105=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12105
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12105=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12105
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12105=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12105
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12105=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12105
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12105=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12105
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12104
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12105=
Cisco 3620 Series IOS IP	S362C-12105
Cisco 3620 Series IOS IP	S362C-12105=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12105
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12105=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12105
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12105=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12105
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12105=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12105
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12105=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12105

Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12105=
Cisco 3620 Series IOS IP PLUS	S362CP-12105
Cisco 3620 Series IOS IP PLUS	S362CP-12105=
Cisco 3620 Series IOS IP/H323	S362CU-12105
Cisco 3620 Series IOS IP/H323	S362CU-12105=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12104=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12104
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12104=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12104
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12104=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12104
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12104=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12104
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12104=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12104
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12104=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12104
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12104=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12104
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12104=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12104
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12104=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12104
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12104=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12104
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12104=
Cisco 3620 Series IOS IP	S362C-12104
Cisco 3620 Series IOS IP	S362C-12104=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12103XI
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12103XI
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12103XI=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12103XI
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12103XI
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12103XI=
Cisco 3620 Series IOS ENTERPRISE PLUS/H323 MCM	S362APU-12103XI
Cisco 3620 Series IOS ENTERPRISE PLUS/H323 MCM	S362APU-12103XI=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12104

Cisco 3620 Series IOS IP/FW/IDS	S362CH-12104=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12103XI
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12104
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12104=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12103XI
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12104
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12104=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12104
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12104=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12103XI
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12103XI=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12104
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12104=
Cisco 3620 Series IOS IP PLUS	S362CP-12103XI
Cisco 3620 Series IOS IP PLUS	S362CP-12103XI=
Cisco 3620 Series IOS IP PLUS	S362CP-12104
Cisco 3620 Series IOS IP PLUS	S362CP-12104=
Cisco 3620 Series IOS IP/H323 MCM	S362CU-12103XI
Cisco 3620 Series IOS IP/H323 MCM	S362CU-12103XI=
Cisco 3620 Series IOS IP/H323	S362CU-12104
Cisco 3620 Series IOS IP/H323	S362CU-12104=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12103T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12103T=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12103T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12103T=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12103T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12103T=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12103T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12103T=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12103T
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12103T=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12103T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12103T=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12103T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12103T=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12103T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12103T=

Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12103T
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12103T=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12103T
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12103T=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12103T
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12103T=
Cisco 3620 Series IOS IP	S362C-12103T
Cisco 3620 Series IOS IP	S362C-12103T=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12103T
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12103T=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12103T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12103T=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12103T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12103T=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12103T
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12103T=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12103T
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12103T=
Cisco 3620 Series IOS IP PLUS	S362CP-12103T
Cisco 3620 Series IOS IP PLUS	S362CP-12103T=
Cisco 3620 Series IOS IP/H323	S362CU-12103T
Cisco 3620 Series IOS IP/H323	S362CU-12103T=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12103
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12103=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12103
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12103=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12103
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12103=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12103
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12103=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12103
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12103=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12103
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12103=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12103
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12103=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12103



Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12103=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12103
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12103=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12103
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12103=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12103
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12103=
Cisco 3620 Series IOS IP	S362C-12103
Cisco 3620 Series IOS IP	S362C-12103=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12103
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12103=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12103
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12103=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12103
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12103=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12103
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12103=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12103
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12103=
Cisco 3620 Series IOS IP PLUS	S362CP-12103
Cisco 3620 Series IOS IP PLUS	S362CP-12103=
Cisco 3620 Series IOS IP/H323	S362CU-12103
Cisco 3620 Series IOS IP/H323	S362CU-12103=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12102XH
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12102XH
Cisco 3620 Series IOS IP PLUS	S362CP-12102XH
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12102
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12102=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12102
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12102=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12102
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12102=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12102
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12102=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12102
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12102=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12102

Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12102=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12102
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12102=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12102
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12102=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12102
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12102=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12102
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12102=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12102
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12102=
Cisco 3620 Series IOS IP	S362C-12102
Cisco 3620 Series IOS IP	S362C-12102=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12102
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12102=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12102
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12102=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12102
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12102=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12102
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12102=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12102
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12102=
Cisco 3620 Series IOS IP PLUS	S362CP-12102
Cisco 3620 Series IOS IP PLUS	S362CP-12102=
Cisco 3620 Series IOS IP/H323	S362CU-12102
Cisco 3620 Series IOS IP/H323	S362CU-12102=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12101
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12101=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12101
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12101=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12101
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12101=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12101
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12101=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12101
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12101=

Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12101
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12101=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12101
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12101=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12101
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12101=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12101
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12101=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12101
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12101=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12101
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12101=
Cisco 3620 Series IOS IP	S362C-12101
Cisco 3620 Series IOS IP	S362C-12101=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12101
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12101=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12101
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12101=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12101
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12101=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12101
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12101=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12101
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12101=
Cisco 3620 Series IOS IP PLUS	S362CP-12101
Cisco 3620 Series IOS IP PLUS	S362CP-12101=
Cisco 3620 Series IOS IP/H323	S362CU-12101
Cisco 3620 Series IOS IP/H323	S362CU-12101=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12007XK
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12007XK=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12007XK
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12007XK=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12007XK
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12007XK=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12007XK
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12007XK=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12007XK

Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12007XK=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12007XK
Cisco 3620 Series IOS IP	S362C-12007XK
Cisco 3620 Series IOS IP	S362C-12007XK=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12007XK
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12007XK=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12007XK
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12007XK
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12007XK=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12007XK
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12007XK=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12007XK
Cisco 3620 Series IOS IP PLUS	S362CP-12007XK
Cisco 3620 Series IOS IP PLUS	S362CP-12007XK=
Cisco 3620 Series IOS IP/H323	S362CU-12007XK
Cisco 3620 Series IOS IP/H323	S362CU-12007XK=
Cisco 3620 Series IOS Enterprise/APPN Plus	S362ANP-12.0.10W
Cisco 3620 Series IOS Enterprise/APPN Plus	S362ANP-12.0.10W=
Cisco 3620 Series IOS Enterprise Plus	S362AP-12.0.10W
Cisco 3620 Series IOS Enterprise Plus	S362AP-12.0.10W=
Cisco 3620 Series IOS IP/IPX/AT/DEC Plus	S362BP-12.0.10W
Cisco 3620 Series IOS IP/IPX/AT/DEC Plus	S362BP-12.0.10W=
Cisco 3620 Series IOS IP Plus	S362CP-12.0.10W
Cisco 3620 Series IOS IP Plus	S362CP-12.0.10W=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12.0.7T=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12.0.7T=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12.0.7T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12.0.7T=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12.0.7T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	S362AL-12.0.7T=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12.0.7T
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12.0.7T=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12.0.7T=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS	S362AR1P-12.0.7T=

Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	S362ARK2-12.0.7T=
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12.0.7T
Cisco 3620 Series IOS IP/IPX/AT/DEC	S362B-12.0.7T=
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12.0.7T
Cisco 3620 Series IOS IP/IPX/AT/DEC/FW/IDS PLUS	S362BHP-12.0.7T=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12.0.7T
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12.0.7T=
Cisco 3620 Series IOS IP	S362C-12.0.7T
Cisco 3620 Series IOS IP	S362C-12.0.7T=
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12.0.7T
Cisco 3620 Series IOS IP/FW/IDS	S362CH-12.0.7T=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12.0.7T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12.0.7T=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12.0.7T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	S362CHL-12.0.7T=
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12.0.7T
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	S362CK2-12.0.7T=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12.0.7T
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12.0.7T=
Cisco 3620 Series IOS IP PLUS	S362CP-12.0.7T
Cisco 3620 Series IOS IP PLUS	S362CP-12.0.7T=
Cisco 3620 Series IOS IP/H323	S362CU-12.0.7T
Cisco 3620 Series IOS IP/H323	S362CU-12.0.7T=
Cisco IOS 3620 Series Enterprise/APPN Plus	SF362ANP-11.2.22P
Cisco IOS 3620 Series Enterprise/APPN Plus	SW362ANP-11.2.22P=
Cisco IOS 3620 Series Enterprise/APPN Plus 40	SF362ANW-11.2.22P
Cisco IOS 3620 Series Enterprise/APPN Plus 40	SW362ANW-11.2.22P=
Cisco IOS 3620 Series Enterprise/APPN Plus 56	SW362ANY-11.2.22P=
Cisco IOS 3620 Series Enterprise Plus	SF362AP-11.2.22P
Cisco IOS 3620 Series Enterprise Plus	SW362AP-11.2.22P=
Cisco IOS 3620 Series Enterprise Plus 40	SF362AW-11.2.22P
Cisco IOS 3620 Series Enterprise Plus 40	SW362AW-11.2.22P=
Cisco IOS 3620 Series Enterprise Plus 56	SF362AY-11.2.22P
Cisco IOS 3620 Series Enterprise Plus 56	SW362AY-11.2.22P=
Cisco IOS 3620 Series IP/IPX/AT/DEC	SF362B-11.2.22P
Cisco IOS 3620 Series IP/IPX/AT/DEC	SW362B-11.2.22P=

Cisco IOS 3620 Series IP/IPX/AT/DEC Plus	SF362BP-11.2.22P
Cisco IOS 3620 Series IP/IPX/AT/DEC Plus	SW362BP-11.2.22P=
Cisco IOS 3620 Series IP	SF362C-11.2.22P
Cisco IOS 3620 Series IP	SW362C-11.2.22P=
Cisco IOS 3620 Series IP Plus	SF362CP-11.2.22P
Cisco IOS 3620 Series IP Plus	SW362CP-11.2.22P=
Cisco IOS 3620 Series IP Plus 40	SF362CW-11.2.22P
Cisco IOS 3620 Series IP Plus 40	SW362CW-11.2.22P=
Cisco IOS 3620 Series IP Plus 56	SF362CY-11.2.22P
Cisco IOS 3620 Series IP Plus 56	SW362CY-11.2.22P=
Cisco IOS 3620 Series Enterprise/APPN Plus	SF362ANP-11.2.23P
Cisco IOS 3620 Series Enterprise/APPN Plus	SW362ANP-11.2.23P=
Cisco IOS 3620 Series Enterprise/APPN Plus 40	SF362ANW-11.2.23P
Cisco IOS 3620 Series Enterprise/APPN Plus 40	SW362ANW-11.2.23P=
Cisco IOS 3620 Series Enterprise/APPN Plus 56	SF362ANY-11.2.23P
Cisco IOS 3620 Series Enterprise/APPN Plus 56	SW362ANY-11.2.23P=
Cisco IOS 3620 Series Enterprise Plus	SF362AP-11.2.23P
Cisco IOS 3620 Series Enterprise Plus	SW362AP-11.2.23P=
Cisco IOS 3620 Series Enterprise Plus 40	SF362AW-11.2.23P
Cisco IOS 3620 Series Enterprise Plus 40	SW362AW-11.2.23P=
Cisco IOS 3620 Series Enterprise Plus 56	SF362AY-11.2.23P
Cisco IOS 3620 Series Enterprise Plus 56	SW362AY-11.2.23P=
Cisco IOS 3620 Series IP/IPX/AT/DEC	SF362B-11.2.23P
Cisco IOS 3620 Series IP/IPX/AT/DEC	SW362B-11.2.23P=
Cisco IOS 3620 Series IP/IPX/AT/DEC Plus	SF362BP-11.2.23P
Cisco IOS 3620 Series IP/IPX/AT/DEC Plus	SW362BP-11.2.23P=
Cisco IOS 3620 Series IP	SF362C-11.2.23P
Cisco IOS 3620 Series IP	SW362C-11.2.23P=
Cisco IOS 3620 Series IP Plus	SF362CP-11.2.23P
Cisco IOS 3620 Series IP Plus	SW362CP-11.2.23P=
Cisco IOS 3620 Series IP Plus 40	SF362CW-11.2.23P
Cisco IOS 3620 Series IP Plus 40	SW362CW-11.2.23P=
Cisco IOS 3620 Series IP Plus 56	SF362CY-11.2.23P
Cisco IOS 3620 Series IP Plus 56	SW362CY-11.2.23P=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12007XK
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	S362AHK2-12007XK=

Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12007XK
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	S362AHL-12007XK=
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12007XK
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	S362AK2-12007XK=
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12007XK
Cisco 3620 Series IOS ENTERPRISE PLUS	S362AP-12007XK=
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12007XK
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	S362AR1L-12007XK=
Cisco 3620 Series IOS IP/IPX/AT/DEC PLUS	S362BP-12007XK=
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	S362CHK2-12007XK=
Cisco 3620 Series IOS IP PLUS IPSEC 56	S362CL-12007XK=
Cisco IOS 3620 Series Enterprise/APPN Plus 56	SF362ANY-11.2.22P
Encryption Export Licenses for the Cisco 3620	
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12105
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12105
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12105
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12105
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12105
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12007XK
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	I362AR1L-12007XK
Cisco 3620 Series IOS IP	I362C-12007XK
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12007XK
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12007XK
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	I362CHL-12007XK
Cisco 3620 Series IOS IP PLUS IPSEC 56	I362CL-12007XK
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12007XK
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12007XK
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	I362AHL-12007XK
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	I362AL-12007XK
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 56	I362AHL-12.0.7T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12.0.7T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 56	I362AL-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 56	I362AR1L-12.0.7T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12.0.7T
Cisco 3620 Series IOS IP	I362C-12.0.7T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12.0.7T

Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 56	I362CHL-12.0.7T
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12.0.7T
Cisco 3620 Series IOS IP PLUS IPSEC 56	I362CL-12.0.7T
Cisco IOS 3620 Series Enterprise/APPN Plus 56	I362ANY-11.2.22P=
Cisco IOS 3620 Series Enterprise/APPN Plus 56	I362ANY-11.2.23P=
Cisco IOS 3620 Series Enterprise Plus 56	INT362AY-11.2.22P=
Cisco IOS 3620 Series IP Plus 56	INT362CY-11.2.22P=
Cisco IOS 3620 Series Enterprise Plus 56	INT362AY-11.2.23P=
Cisco IOS 3620 Series IP Plus 56	INT362CY-11.2.23P=
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12102T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12102T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12102T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12102T
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12102T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12102
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12102
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12102
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12102
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12102
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12103T
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12103T
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12103T
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12103T
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12103T
Cisco 3620 Series IOS ENTERPRISE/FW/IDS PLUS IPSEC 3DES	I362AHK2-12103
Cisco 3620 Series IOS ENTERPRISE PLUS IPSEC 3DES	I362AK2-12103
Cisco 3620 Series IOS ENTERPRISE/SNASW PLUS IPSEC 3DES	I362ARK2-12103
Cisco 3620 Series IOS IP/FW/IDS PLUS IPSEC 3DES	I362CHK2-12103
Cisco 3620 Series IOS IP PLUS IPSEC 3DES	I362CK2-12103
<b>Cisco 3600 Software Upgrades for Routers with IP Software</b>	
Cisco 3600 Enterprise/FW Plus IPSEC 56 Feature Pack	CD36-AHL-12.0.7=
Cisco 3600 Enterprise/FW Plus IPSEC 3DES Feature Pack	CD36-AHK2-12.0.7=
Cisco 3600 Enterprise Plus IPSEC 56 Feature Pack	CD36-AL-12.0.7=
Cisco 3600 Enterprise Plus Feature Pack	CD36-AP-12.0.7=
Cisco 3600 IP/IPX/AppleTalk/DECnet/FW Plus Feature Pack	CD36-BHP-12.0.7=
Cisco 3600 IP/IPX/AppleTalk/DECnet Plus Feature Pack	CD36-BP-12.0.7=
Cisco 3600 IP/IPX/AppleTalk/DECnet Feature Pack	CD36-B-12.0.7=



Cisco 3600 IP Plus IPSEC 56 Feature Pack	CD36-CL-12.0.7=
Cisco 3600 IP Plus IPSEC 3DES Feature Pack	CD36-CK2-12.0.7=
Cisco 3600 IP/FW Plus IPSEC 56 Feature Pack	CD36-CHL-12.0.7=
Cisco 3600 IP/FW Plus IPSEC 3DES Feature Pack	CD36-CHK2-12.0.7=
Cisco 3600 IP Plus Feature Pack	CD36-CP-12.0.7=
Cisco 3600 IP/FW Feature Pack	CD36-CH-12.0.7=
Cisco 3600 IP Feature Pack	CD36-C-12.0.7=
<b>Cisco 3600 Series Feature Licenses</b>	
Cisco 3600 Series IP-to-IP and IBM IOS Upgrade	FR-G36X-CCS=
Cisco 3600 Series IP-to-IP/IPX IOS Upgrade	FR-G36X-CD=
Cisco 3600 Series IP-to-IP/IPX and IBM IOS Upgrade	FR-G36X-CDS=
Cisco 3600 Series IP-to-Desktop IOS Upgrade	FR-G36X-CB=
Cisco 3600 Series IP-to-Desktop and IBM IOS Upgrade	FR-G36X-CBS=
Cisco 3600 Series IP-to-Enterprise IOS Upgrade	FR-G36X-CA=
Cisco 3600 Series IP and IBM-to-Desktop IOS Upgrade	FR-G36X-CSBS=
Cisco 3600 Series IP and IBM-to-Enterprise IOS Upgrade	FR-G36X-CSA=
Cisco 3600 Series IP/IPX-to-IP/IPX and IBM IOS Upgrade	FR-G36X-DDS=
Cisco 3600 Series IP/IPX-to-Desktop IOS Upgrade	FR-G36X-DB=
Cisco 3600 Series IP/IPX-to-Enterprise IOS Upgrade	FR-G36X-DA=
Cisco 3600 Series IP/IPX and IBM-to-Desktop IOS Upgrade	FR-G36X-DSBS=
Cisco 3600 Series IP/IPX and IBM-to-Enterprise IOS Upgrade	FR-G36X-DSA=
Cisco 3600 Series Desktop-to-Desktop and IBM IOS Upgrade	FR-G36X-BBS=
Cisco 3600 Series Desktop-to-Enterprise IOS Upgrade	FR-G36X-BA=
Cisco 3600 Series Desktop and IBM-to-Enterprise IOS Upgrade	FR-G36X-BSA=
Cisco 3600 Series APPN Upgrade	FR-G36X-APPN=
<b>Cisco 3600 Series IOS Upgrades for 11.2 and Newer</b>	
Cisco IOS 3600 Series FIREWALL Upgrade	FL36-H=
Cisco IOS 3600 Series PLUS	FL36-P=
Cisco IOS 3600 Series PLUS 40	FL36-W=
Cisco IOS 3600 Series PLUS 56	FL36-Y=
Cisco IOS 3600 Series APPN	FL36-APPN=
Cisco IOS 3600 Series IP to Enterprise	FL36-C-A=
Cisco IOS 3600 Series IP to IP/IPX/AT/DEC	FL36-C-B=
Cisco IOS 3600 Series IP to H323	FL36-C-U=
Cisco IOS 3600 Series IP PLUS IPSEC56 to ENT PLUS IPSEC56	FL36-CL-AL=
Cisco IOS 3600 IP/IPX/AT/DEC to Enterprise or Ent Plus	FL36-B-A=
Cisco IOS 3600 Series IP/IPX to Enterprise	FL36-D-A=

Cisco IOS 3600 Series IP/IPX to IP/IPX/AT/DEC	FL36-D-B=
Cisco IOS 3600 Series SNASwitch Upgrade	FL36-R1=
Cisco IOS 3600 Series APPN to SNASwitch Upgrade	FL36-N-R1=
Cisco IOS 3600 Series Plus to Plus 40	FL36-P-W=
Cisco IOS 3600 Series Plus to Plus 56	FL36-P-Y=
Cisco IOS 3600 Series PLUS to IPSEC 3DES Upgrade	FL36-P-K2=
Cisco IOS 3600 Series PLUS to IPSEC 56 Upgrade	FL36-P-L=
<b>Cisco 3600 Series Modem Management Technology Licenses</b>	
Modem management technology license for 3600	MMTL-3600-6
Modem management technology license for 3600	MMTL-3600-6=
Modem Management Technology License For 8 Analog Modems	MMTL-3600/2600-8=
Modem management technology license for 3600	MMTL-3600-12
Modem management technology license for 3600	MMTL-3600-12=
Modem Management Technology License For 16 Analog Modems	MMTL-3600/2600-16=
Modem management technology license for 3600	MMTL-3600-18
Modem management technology license for 3600	MMTL-3600-18=
Modem management technology license for 3600	MMTL-3600-24
Modem management technology license for 3600	MMTL-3600-24=
Modem management technology license for 3600	MMTL-3600-30
Modem management technology license for 3600	MMTL-3600-30=

## Documentation

For part numbers for product specific documentation, visit

[http://www.cisco.com/univercd/cc/td/doc/pcat/swdo\\_\\_d1.htm](http://www.cisco.com/univercd/cc/td/doc/pcat/swdo__d1.htm)

## Options for the Cisco 3600 Series

For configuration and ordering information for network modules, WAN interface cards, and voice/fax interface cards for the Cisco 3600 series routers, see the — [Options for Cisco 3600, 2600, and 1600: NMs, VICs, WICs, and AIMs](#)

HOME CONTENTS PREVIOUS NEXT GLOSSARY FEEDBACK SEARCH HELP

Posted: Thu Jan 25 05:31:50 PST 2001

All contents are Copyright © 1992--2001 Cisco Systems, Inc. All rights reserved.

[Important Notices and Privacy Statement.](#)

## **ATTACHMENT 2**

Other trunk groups for operator services, directory assistance, emergency services and intercept may be established if required. The LERG should be referenced for current routing and tandem serving arrangements. The Supergroup Architecture is illustrated in Exhibit E.

2.6           Cbeyond may establish interconnection at BellSouth end offices for the delivery of Cbeyond originated local and intraLATA toll traffic destined for BellSouth end-users served by that end-office.

2.6.1        When end office trunking is ordered by BellSouth to deliver BellSouth originated traffic to Cbeyond, BellSouth will provide overflow routing through BellSouth tandems consistent with how BellSouth overflows its traffic. The overflow will be based on the homing arrangements Cbeyond displays in the LERG. Likewise, if Cbeyond interconnects to a BellSouth end office for delivery of Cbeyond originated traffic, Cbeyond will overflow the traffic through the BellSouth tandems based on the BellSouth homing arrangements shown in the LERG.

2.6.2        The Parties shall utilize direct end office trunking under the following conditions:

(1) Tandem Exhaust - If a tandem through which the Parties are interconnected is unable to, or is forecasted to be unable to support additional traffic loads for any period of time, the Parties will mutually agree on an end office trunking plan or an alternative routing plan that will alleviate the tandem capacity shortage and ensure completion of traffic between Cbeyond and BellSouth's subscribers.

(2) Traffic Volume -To the extent either Party has the capability to measure the amount of traffic between a Cbeyond switching center and a BellSouth end office, that Party shall install and retain direct end office trunking sufficient to handle actual or reasonably forecasted traffic volumes, whichever is greater, between a Cbeyond switching center and a BellSouth end office where the traffic exceeds or is forecasted to exceed two DS1s of local traffic per month. Either Party will install additional capacity between such points when overflow traffic between

Cbeyond's switching center and BellSouth's end office exceeds or is forecasted to exceed two DS1s of local traffic per month. In the case of one way trunking from Cbeyond, additional trunking shall be required when its traffic volume has achieved the preceding threshold. Additionally, in the case of one-way trunks from BellSouth, additional trunking may be requested by either party when its traffic volume has achieved a single DS1 of local traffic per month.

(3) Mutual Agreement - The Parties may install direct end office trunking upon mutual agreement in the absence of the conditions (1) or (2) above.

## FOCAL/VERIZON Interconnection Agreement for Pennsylvania

200,000 MOU per month criteria set forth above). The Verizon Tandem office shall be designated as both a Verizon-IP and a Focal-IP; provided, however, that each Party shall be responsible for fifty percent (50%) of the two-way Tandem Interconnection facilities. Focal shall be entitled to use multiple facilities providers at Verizon Tandem offices. BA tandem interconnection facilities shall terminate at a BA-provided fiber-optic terminal located at Focal's switch facility, if Focal's switch facility is located in the relevant LATA. In instances where Focal's switch facility is not located in the relevant LATA, BA's tandem interconnection facilities shall terminate at a mutually agreed upon IP located within the LATA.

(c) If the Parties are unable to identify a suitable alternative IP, as set forth in subsection (a) above, the matter can be taken to dispute resolution.

4.2.4 The Parties shall configure separate one-way Traffic Exchange Trunks for traffic from Focal to Verizon, and for traffic from Verizon to Focal, respectively; provided, however, that in lieu thereof, upon receipt of Focal's written request, Verizon shall provide Focal two-way Traffic Exchange Trunks pursuant to the terms and conditions set forth below:

(a) Prior to requesting two-way Traffic Exchange Trunks from Verizon, Focal shall meet with Verizon to conduct a joint planning meeting. At that joint planning meeting, each Party shall provide to the other Party originating CCS information, and the Parties shall agree on the appropriate initial number of two-way End Office and Tandem Traffic Exchange Trunks and the interface specifications at the Point of Interconnection.

(b) The Parties shall meet (telephonically or in person) from time to time, as needed, to review data on End Office and Tandem two-way Traffic Exchange Trunks to determine the need for new trunk groups and to plan any necessary changes in the provisioning of two-way Traffic Exchange Trunks.

(c) On a semi-annual basis, Focal shall submit a good faith forecast to Verizon of the number of End Office and Tandem two-way Traffic Exchange Trunks that Focal anticipates that it will require from Verizon during the ensuing two (2) year period. Such trunk forecasts shall conform to the Verizon CLEC trunk forecasting guidelines as in effect from time to time.

(d) Two-Way Traffic Exchange Trunks shall have SS7 Common Channel Signaling with B8ZS and Extended Super Frame (ESF), where available.

(e) With respect to End Office two-way Traffic Exchange Trunks, both Parties shall use an economic CCS equal to five (5).

(f) In the event the traffic volume between any two (2) End Office switches at any time exceeds the CCS busy hour equivalent of one (1) DS-1 based on an industry standard study period, Focal shall promptly submit an ASR to Verizon to establish new End Office two-way Traffic Exchange Trunks to the applicable End Office(s). In the event that appropriate data is not available to make such a determination, the Parties shall use a threshold of 200,000 combined minutes of use for a single month as a trigger.

have knowledge of the offered and overflow load at each end of the two-way trunk group, and thereby enable accurate and independent determination of performance levels and trunk requirements. The parties agree to the electronic exchange of data.

- 3.5 The Parties recognize that embedded one-way trunks may exist for Local/IntraLATA toll traffic via end-point meet Interconnection architecture. The parties agree to negotiate a transition plan to migrate the embedded one-way trunks to two-way trunks via any Interconnection method as described in Appendix NIM. The Parties will coordinate any such migration, trunk group prioritization, and implementation schedule. SBC-13STATE agrees to develop a cutover plan and project manage the cutovers with CLEC participation and agreement.

#### 4. TANDEM TRUNKING AND DIRECT END OFFICE TRUNKING

- 4.1 SBC-13STATE deploys in its network Tandems that switch local only traffic (local Tandem SBC-SWBT only), Tandems that switch IntraLATA and InterLATA traffic (Access Tandem) and Tandems that switch both local and IntraLATA/InterLATA traffic (local/Access Tandem). In addition SBC-13STATE deploys Tandems that switch ancillary traffic such as 911 (911 Tandem), Operator Services/ Directory Assistance (OPS/DA Tandem), and mass calling (choke Tandem). Traffic on Tandem trunks does not terminate at the Tandem but is switched to other trunks that terminate the traffic in End Offices and ultimately to End Users.
- 4.2 When Tandem trunks are deployed, CLEC shall route appropriate traffic (i.e. only traffic to End Offices that subtend that Tandem) to the respective SBC-13STATE Tandems on the trunk groups defined below. SBC-13STATE shall route appropriate traffic to CLEC switches on the trunk groups defined below.
- 4.2.1 When transit traffic through the SBC-13STATE Tandem from CLEC to another Local Exchange Carrier, CLEC or wireless carrier requires 24 or more trunks, CLEC shall establish a direct End Office trunk group between itself and the other Local Exchange Carrier, CLEC or wireless carrier CLEC shall route Transit Traffic via SBC-13STATE's Tandem switches, and not at or through any SBC-13STATE End Offices. This trunk group will be serviced in accordance with the Trunk Design Blocking Criteria in Section 7.0.
- 4.3 While the Parties agree that it is the responsibility of the CLEC to enter into arrangements with each third party carrier (ILECs or other CLECs) to deliver or receive transit traffic, SBC-13STATE acknowledges that such arrangements may not currently be in place and an interim arrangement will facilitate traffic

completion on an interim basis. Accordingly, until the earlier of (i) the date on which either Party has entered into an arrangement with third-party carrier to exchange transit traffic to CLEC and (ii) the date transit traffic volumes exchanged by the CLEC and third-party carrier exceed the volumes specified in Section 4.2.1, SBC-13STATE will provide CLEC with transit service. CLEC agrees to use reasonable efforts to enter into agreements with third-party carriers as soon as possible after the Effective Date.

- 4.4 Direct End Office trunks terminate traffic from a CLEC switch to an SBC-13STATE End Office and are not switched at a Tandem location. The Parties shall establish a two-way direct End Office trunk group when End Office traffic requires twenty-four (24) or more trunks or when no local or local/Access Tandem is present in the local exchange area. Overflow from either end of the direct End Office trunk group will be alternate routed to the appropriate Tandem.
- 4.5 All traffic received by SBC-13STATE on the direct End Office trunk group from CLEC must terminate in the End Office, i.e. no Tandem switching will be performed in the End Office. Where End Office functionality is provided in a remote End Office of a host/remote configuration, the Interconnection for that remote End Office is only available at the host switch. The number of digits to be received by the SBC-13STATE End Office shall be mutually agreed upon by the Parties. This trunk group shall be two-way.

4.6 Trunk Configuration

4.6.1 Trunk Configuration – SBC-SWBT, SBC-AMERITECH and SNET

- 4.6.1.1 Where available and upon the request of the other Party, each Party shall cooperate to ensure that its trunk groups are configured utilizing the B8ZS ESF protocol for 64 kbps Clear Channel Capability (64CCC) transmission to allow for ISDN interoperability between the Parties' respective networks. Trunk groups configured for 64CCC and carrying Circuit Switched Data (CSD) ISDN calls shall carry the appropriate Trunk Type Modifier in the CLCI-Message code. Trunk groups configured for 64CCC and not used to carry CSD ISDN calls shall carry a different appropriate Trunk Type Modifier in the CLCI-Message code.

4.6.2 Trunk Configuration – PACIFIC and NEVADA

- 4.6.2.1 When Interconnecting at PACIFIC/NEVADA's digital End Offices, the Parties have a preference for use of Bipolar 8 Zero Substitution Extended Super Frame (B8ZS ESF) two-way trunks